## YCM8-□ HU series

# Photovoltaic AC MCCB OPERATION INSTRUCTION

Standard:IEC/EN60947-2




Before installing and using this product, please read this manual carefully and pay more attention to safety.

#### 1. Product description

YCM8-HU series AC molded case circuit breaker is suitable for AC grid circuits with rated voltage up to AC1140V and rated current of 800A. The circuit breaker has the functions of overload long-time delay protection and short-circuit instantaneous protection, and is used to distribute electric energy and protect lines and power supply equipment from overload, short circuit and other faults.

#### 2. Type and meaning

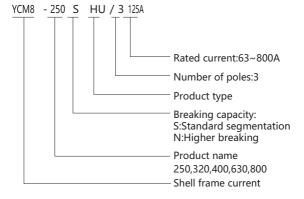

# 3. Technical data


(mm) Depth(D)	dimen-, Height(H)	Overall Width(W)	Certifications	Attached accessories	Standard	Mechanical life(time)	Electrical life(time)	Tripping type	Isolation function	Wiring method	Running short-circuit breaking capacity lcs(kA)	breaking capacity Icu N	Ultimate short-circuit S	Rated current In(A)	Rated impulse withstand voltage Uimp(KV)	Rated insulation voltageUi(V)	AC working voltage(V)	Number of poles of products	Shell frame current Inm(A)	Model
126	180	) 107			20000	3000 3000 2000	1					85 50 36.5 10	63, 80, 100, 125, 140, 160, 180, 200, 225, 250	00	AC1150	415 690 800 1140	з	250	YCM8- 250HU	
126	180	107		Shunt,Alarm,Aux		00	3000 3000 2000			Up in ar Down in a		,	85 50 36.5 10	280, 315, 320	œ	AC1150	415   690   800   1140	3	320	YCM8-320HU
165	250	182	CE	Shunt,Alarm,Auxiliary,Manual operation,Electric operation	IEC/EN60947-2	10000	1000 1000 700	Thermal-magnetic type	Yes	Up in and down out, down in and up out, Down in and up out, up in and down out(3P)	lcs=100%lcu	100 60 50 15	85 50 36.5 10	225, 250, 315, 350, 400	12	AC1150	415   690   800   1140	3	400	YCM8-400HU
165	250	182	,Electric operation	Electric operation		5000	1000 1000 700			d up out, vn out(3P)		100 60 50 15	85 50 36.5 10	500, 630	12	AC1150	415   690   800   1140   415   690   800   1140   415   690   800   1140   415   690   800   1140   415   690   800   1140	3	630	YCM8-630HU
165	250	182				1000 1000 700 5000				100 60 50 15	85 50 36.5 10	700,800	12	AC1150	415   690   800   1140	ω	800	YCM8-800HU		

Note: ① 2P connection in series, ② 3P connection in series

#### 4. Usage Information

- ①The normal operating environment temperature of the product is -5°C~+40°C;
  - Note: If used within the range of -35 °C to+70 °C, please consult
- ②with the manufacturer for use When the altitude exceeds 4000m, please consult with the manufacturer for use;
- ③Pollution level: Level 3;
- Main circuit installation category: III;
- (5) Shell protection level: IP20;


#### 5.Inspection and testing

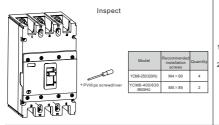




- Determine product technical parameters;
- 2. The installation, operation, and maintenance work of the product is limited to Limited to professionally qualified personnel.



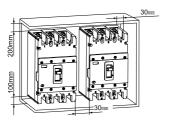




Ensure minimum installation distance

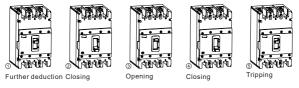


#### 6. Appearance and installation dimensions


YCM8-250HU、320HU

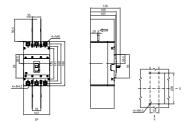

YCM8-400HU, 630HU, 800HU

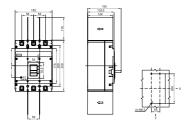


#### Installation drawing of YCM8-HU with arcing cover

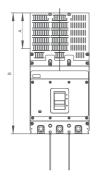

Circuit breaker	Arcing cover length A	Total length B				
YCM8-250/320HU	64	245				
YCM8-400/630/800HU	64	314				

#### 7. Attachment Information




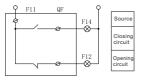

#### Wiring diagram of release




#### Installation of interPVase arc separation plate

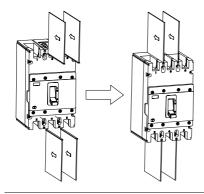



- Be sure to install it before running the product Protective cover
- Check if the product wiring is correct
- 3. Insulation resistance to ground after installation The inspection should not be less than 10M  $\Omega$

#### Installation of partitions and shields

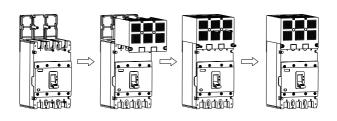

#### 8. Warranty period

Under normal storage and transportation conditions, and with the product packaging or product itself intact, the product has a warranty period of 24 months from the date of production. The following situations are not covered by the warranty:

- ①Damage caused by improper use, storage, and maintenance by users.
- ②Damage caused by non company designated institutions or personnel, or self disassembly and repair.
- 3The product has exceeded the warranty period.
- ④Damage caused by force majeure factors.

#### 9. Environmental protection

In order to protect the environment, when this product or its components are scrapped, please dispose of them properly as industrial waste; Or it can be handed over to a recycling station for classification, disassembly, recycling, and reuse in accordance with relevant national regulations.

#### Safety tips

- (1) The product is strictly prohibited from being installed in environments containing flammable and explosive gases or damp condensation, and it is strictly prohibited to operate the product with wet hands:
- (2) During product operation, it is strictly prohibited to touch conductive parts of the product
- (3) When installing, maintaining, and maintaining products, it is necessary to ensure that the circuit is powered off; (4) Do not install in areas where gas media can corrode metals and damage insulation;
- (5) To avoid dangerous accidents, the installation and fixation of the product must strictly follow the requirements of the manual.



### **CNC ELECTRIC**

Tel: 0086-577-61989999 Fax: 0086-577-61891122 www.cncele.com E-mail: cncele@cncele.com